




00EDS-1070-03


XCP to EDS Tubing Adapter

Adapts 00XCP-1092-00 E-Z Breathe Boom Cannula or
00XCP-1040-00 Standard Cannula for use with EDS O2D2, O2D1

NOT to be used with any XCP conserving cannula or facemask

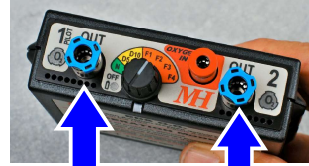

EDS
O2D2

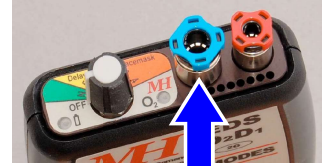

EDS
O2D1



1
Push the barbed end of the 00EDS-1070-03 adapter into the fitting on the end of the XCP feed tube.
Push / twist / wriggle the tube fittings together to make sure that the connection is secure.

2
Insert the Blue 6mm tube end of the 00EDS-1070-03 adapter into the Blue Outlet port of your EDS unit.



00XCP-1092-00
00XCP-1040-00

00EDS-1070-03

5IEDS-1070-03\$A0

XCP to EDS Tubing Adapter

ECO 2020-029 (2020-09-03)




00EDS-1070-03

XCP to EDS Tubing Adapter

Adapts 00XCP-1092-00 E-Z Breathe Boom Cannula or
00XCP-1040-00 Standard Cannula for use with EDS O2D2, O2D1

NOT to be used with any XCP conserving cannula or facemask

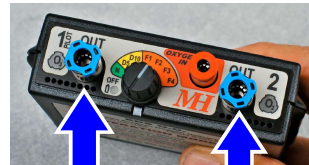

EDS
O2D2




EDS
O2D1



1
Push the barbed end of the 00EDS-1070-03 adapter into the fitting on the end of the XCP feed tube.
Push / twist / wriggle the tube fittings together to make sure that the connection is secure.

2
Insert the Blue 6mm tube end of the 00EDS-1070-03 adapter into the Blue Outlet port of your EDS unit.

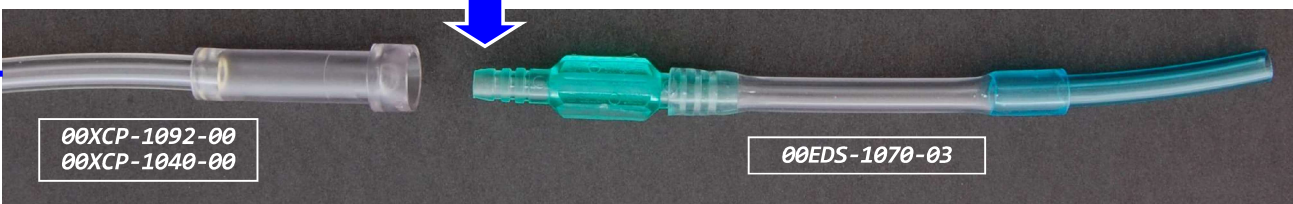

00XCP-1092-00
00XCP-1040-00

00EDS-1070-03

5IEDS-1070-03\$A0

XCP to EDS Tubing Adapter

ECO 2020-029 (2020-09-03)