
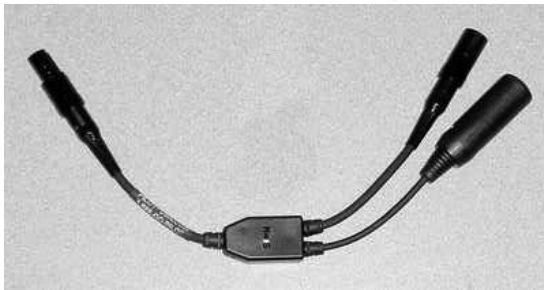


AMSK0-0106-00

MH ALPS MIC ADAPTER

(Some models of headsets will require an MH AMSK0-0106-00 adapter)

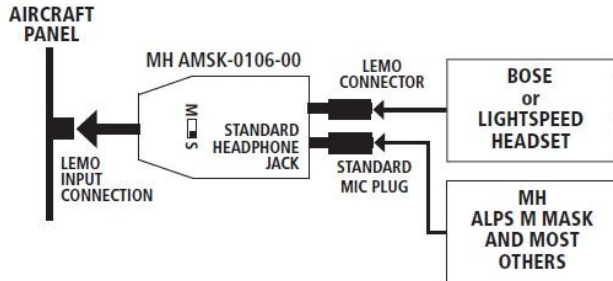

MH ALPS MIC ADAPTER with BOSE or LIGHTSPEED headset

Facemasks with a microphone can now operate properly with the BOSE and LIGHTSPEED headsets that incorporate the LEMO connectors. Because both microphones provide input signals to your audio system at once, you will need to switch-out the Bose microphone and switch in the facemask microphone with our MH AMSK0-0106-00 microphone adapter. Without the adapter, your voice over the intercom and most importantly, the radio will be degraded to the point that Center will have trouble hearing you.



The MH Adapter has a switch (M for Mask, S for headset) that allows you to easily switch between the two microphones without fumbling with the LEMO connectors. The MH microphone adapter does not affect the stereo earphone circuit.



Tollfree: 800-468-8185 | Local: 541-923-4100

MADE IN THE USA CUSTOM BUILT-IN AND CARRY ON AVIATION OXYGEN SYSTEMS
Mountain High Oxygen, 2244 SE Airport Way, Suite 100, Redmond OR. 97756 MHOxygen.com