


1

2

3

4

REV	ECO	Release	Drawn	REVISION HISTORY
-0	2020-017	2020-06-23	SGO	Customer Drawing

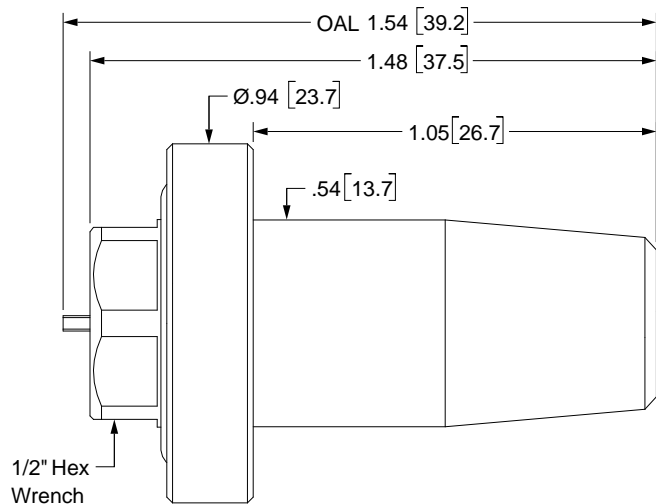

DIN-477-9N

DIN Nut
(not shown)
R 3/4-14 RH
(1.037)-14
[26.4mm]

1/4-18 MNPT

Adapts 1/4-18 FNPT Port to DIN-477-9N Euro CV-style Connection


GENERAL SPECIFICATIONS

Material: UNS C36000 (CDA-360) Brass
Weight: 1.9 oz [54 g]

Operating Pressure: 3000 PSI
Temp Range: -50°F to +130°F [-45°C to +55°C]

Cleaned for oxygen service per MH ESR-008

Note: This Adapter requires an accompanying DIN Nut (MH p/n 00HDW-0376-00) when incorporated into a final assembly.

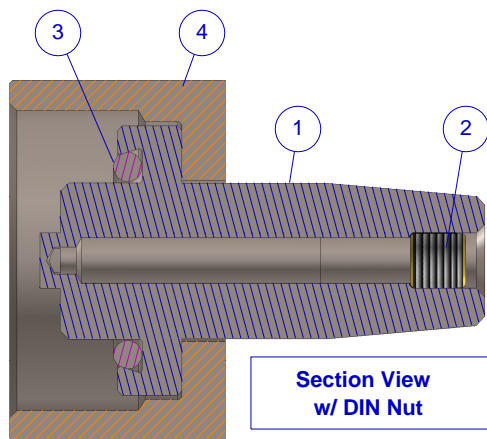

Section View
w/ DIN Nut

REF	MH p/n	Description
1	00HDW-0371-00	DIN Nipple Adapter
2	09025-0024-00	Filter
3	09001-3113-70	O-Ring
4	00HDW-0376-00	DIN Nut


UNLESS OTHERWISE SPECIFIED,
DIMENSIONS ARE IN INCHES.

DIMENSIONS IN [] ARE MILLIMETERS (REF)

TOLERANCES ARE:
0.X ±0.015 ANGLES ±3°
0.XX ±0.010 FRACTIONS ±1/64
0.XXX ±0.005

INTERPRET GD&T PER ASME 14.5

THIRD ANGLE
PROJECTION



DO NOT SCALE
DRAWING

DRAWN SGO
2013-10-02

CHECKED MDG
2013-10-24

ENGINEER PLM
2013-10-24

APPROVED HBS
2013-10-24

MH MOUNTAIN HIGH E&S CO.
REDMOND, OR. USA

THIS DOCUMENT AND ALL TECHNICAL DATA HEREON DISCLOSED ARE PROPERTY OF MOUNTAIN HIGH E&S CO. AND SHALL NOT BE USED, RELEASED OR DISCLOSED IN WHOLE OR PART WITHOUT WRITTEN PERMISSION FROM MOUNTAIN HIGH E&S CO. THIS DOCUMENT MUST BE RETURNED TO MOUNTAIN HIGH E&S CO. IMMEDIATELY UPON REQUEST.

Customer Drawing, Transfiller Nipple Assembly,
DIN-477-9N Euro CV-style to 1/4-18 MNPT [SCD]

DWG TITLE
5SHDW-0373-02

DWG NUMBER
5SHDW-0373-02

DWG SHEET 1 OF 1
DWG SCALE
DWG REV. -2
DWG SIZE A 11x8 1/2